


# 1" THIN MATERIAL ATTACHMENT



A unique attachment for welding thinner, non-supported material from 5 - 10 mil thickness. Pre-weld rollers and guides align material to help eliminate it from drifting. The *Thin Material Attachment* can only be used with the hem cord housing and hem wedge.

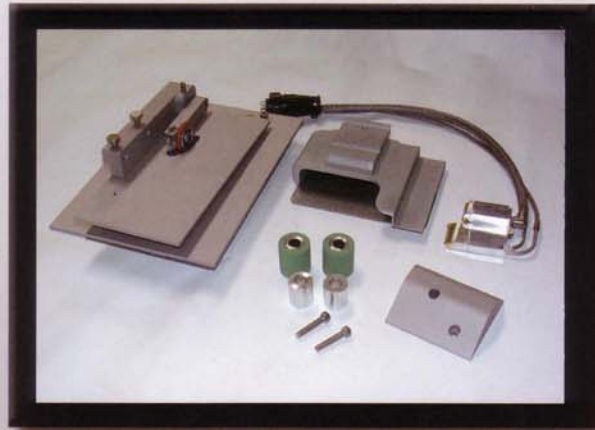


## TUBE GUIDE ATTACHMENT



The *Tube Guide Attachment* will allow the fabricator to produce a specific size tube, on a continuous basis. Ideal for fabricating bladder bags, flotation tubes, ventilation tubes, filtration socks, sandbags, etc. The *Tube Guide* is adjustable from approximately 1.3" (31mm) to 11.5" (288mm) diameter and fabricates tubes in an automatic or stationary mode. The *Tube Guide* will retrofit to existing *Triads* and can produce tubes with standard wedge selection or the *Hem Cord/Flat Hem Wedge Assembly*.

Attach long rods and guide (included) for tubes of 4.5" (112mm) to 11.5" (288mm) diameter, approximate.

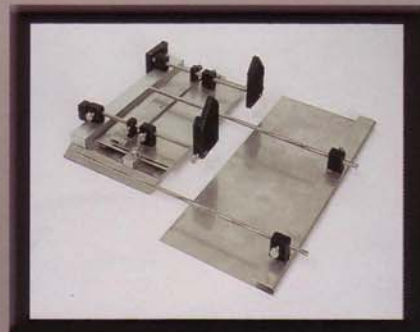

STATIONARY,  
CONTINUOUS  
TUBE WELDING,  
USA

The *Tube Guide Attachment* comes complete with hardware for a full range of welding capabilities.

TRIAD